



INSTALLATION INSTRUCTIONS

FlexLam™ structures are decorated thermoplastic sheets with high impact resistance and are available in a wide variety of patterns and colors. They can be used as a value-added product in areas that vertical grade High Pressure Laminates (HPL) are typically used.

GENERAL

Sizes - 4' x 8' x .032" (1220 x 2440 x .8mm). FlexLam™ structures are also available as 2' x 2' and 2' x 4' Lay-in (grid) ceiling tiles; 2' x 2' and 2' x 4' Glue-up tile; 18" x 24" Backsplash tiles; and 30"-32" x 48" Wainscot tile.

Most product ships with a clear protective film or with TuffCote™.

Slight imperfections and color variations from sheet to sheet are possible and considered normal. Please inspect each sheet carefully before fabrication to insure it meets your needs.

STORING

Store flat and acclimatize in the same environment for at least 24 hours before fabrication.

CUTTING/FABRICATING

FlexLam™ structures can easily be cut to size with a razor knife and scissors or with routers, saw blades, and drilling tools for thermoplastics. When fabricating FlexLam™ always cut from the decorated side.

LAMINATION

Like HPL, structures sheets can be bonded with contact cement, but you must use a product compatible with PVC.

CLEANING and CARE

Clean only with warm, soapy water. Never use abrasive cleaners.

MOULDING

Moulding is available to join and finish structures sheets. Inside corners, outside corners, edge trim and universal trim strips are shown below.



Trims available in 4' or 8' lengths.

GRIDMAX™

GridMax™ is a patented ceiling grid cover system that fits all 15/16 suspension grid systems. GridMax™ 4 ft. Mains, 2 and 4 ft. wall covers are available in most FlexLam™ structures finishes.

Boxes containing enough GridMax™ cover to do 100 sq. ft. ceilings are available in most structures finishes and this the preferred method of our inventory.

PAINTING GUIDE

If a custom color is desired, choose our standard FlexLam™ paintable (white) or EccoFlex paintable (beige) finish. Use recommended paints in accordance with the manufacturer’s recommendations. Due to the high chemical resistance of it, only certain paints adhere well. It is very important to use recommended paints to paint FlexLam™ structures paintable and EccoFlex paintable sheets.

The following paints have been tested and are recommended:

FlexLam™ Paintable Painting Guide			
VENDOR	PRODUCT	PREP 1	PREP 2
Sherwin Williams	Acrolon 218HS	SSPC-SPI Solvent Cleaner	DTM Bonding Primer
Lowes	Signature Interior or American Tradition Exterior Duramax Paints	TSP Cleaner	Plastic Primer Spray
Benjamin Moore	Benjamin Moore Latex or Oil Paint	TSP Cleaner	Fresh Start Primer
Pratt & Lambert	Pratt & Lambert Latex Paint	Scuff Sanding/TSP Cleaner	Supreme Interior/Exterior Multi-Purpose Primer

EccoFlex Paintable Painting Guide			
VENDOR	PRODUCT	PREP 1	TYPE
Sherwin Williams	SuperPaint® or Duration™ or similar	Wiping the sheet with Isopropyl Alcohol (IPA) will help promote paint adhesion. To prepare the surface: EccoFlex sheet surface can be wiped using IPA or rubbing alcohol prior to painting. This method of treatment helps paint attack the surface and create a strong bond to the EccoFlex sheet.	Brush Application
Sherwin Williams	Polane™ Series* or Similar		Spray Application
Cardinal	Polyurethane 6400 Series		Spray Application

* For external applications using Sherwin Williams Polane Series, use exterior catalyst V66V27. The ratio is six parts paint, one part catalyst

Paints Not Recommended: The following types of paints have provided poor adhesion in laboratory testing. Architectural Products by Outwater does not recommend the use of the following paint types for FlexLam™ Paintable or EccoFlex Paintable: Epoxy Paints, Water-Based Latex Paints, and Oil-Based Enamels.

Even though difficulties have been experienced with the paints listed above, customers may experience success with these paint types in the field.

CAUTION: All FlexLam™ sheets being applied to surfaces with any recommended adhesive systems must be acclimatized.

- A. All components to be joined must be acclimatized for 24 hours prior to installation.
- B. Installation between 65°F and 80°F and humidity of 80% or less is necessary.
- C. For every four-foot wide sheet an expansion space of 1/32" (Eight-foot sheet = 1/16") is necessary.

Failure to comply with the above in addition to adhesive manufacturers' installation instructions may result in significant installation problems.

ADHESIVES

Trowel on latex adhesives can be used for adhering FlexLam™ sheets to the wall. The following is meant as a guide for adhesives:

1. **FlexLam™ Pressure Sensitive Adhesive Backing** - can be supplied to most products. Usually requires the wall or ceiling to be treated with a contact adhesive to insure proper bond. Some tin type (*Old World Collection*) "glue-up" designs work well with this type and are ideally suited to backsplash applications.
2. **FlexLam™ Pressure Sensitive Adhesive Rolls (double sided)** - bonds FlexLam™ sheets to most surfaces. Each rolls contains 40 linear feet x 1 1/2" wide (12.5 meters x 38mm).
3. **Contact Adhesives** - Brush or roller-on types, non-flammable, and water based contact adhesives, suitable for PVC, work well. Follow the manufacturer's instructions carefully before installation. Spray-on aerosol types like 3M 77 works well.
4. **Other Adhesives** -


ADHESIVE ITEM	RAW MDF	UNPAINTED SHEETROCK	PAINTED SHEETROCK
Lowes # 100575 Poly Premium	Poor	Acceptable	Acceptable
Lowes # 164280 PL Latex FRP	Good	Good	Good
Liquid Nails LN 950	Good	Very Good	Excellent
Liquid Nails FRP-300	Excellent	Excellent	Excellent
Franklin Woodise Powergrab	Good	Acceptable	Acceptable
Durabond D-745	Very Good	Very Good	Very Good
DAP Weldwood FRP	Very Good	Very Good	Very Good
Loctite PL Premium (Henkel Brand)	Very Good	Very Good	Very Good
Loctite PL Premium Advance (Henkel Brand)	Excellent	Excellent	Excellent

INSTALLATIONS

Glue-Up Ceiling Tiles

1. Before starting the installation, surface must be dry, smooth and free from dust, grease, wax, and other particles*.
2. Measure the area to be covered to determine how many tiles you will need. Draw a plan to visualize how the edges and corners will work. When drawing your plan, it is best to center FlexLam™ panels on the ceiling leaving equal margins on opposite sides of the room.
3. Now transfer the plan to the ceiling, snapping chalk lines to help you keep the tiles aligned.
4. FlexLam™ ceiling tiles should be installed from left to right, starting at the farthest point away from the room entrance. When overlapping four FlexLam™ panels, it is necessary to cut a ½" notch in panel numbers two and three to avoid an overlap buildup that causes a "bump" (see sketch 2).

SKETCH 2

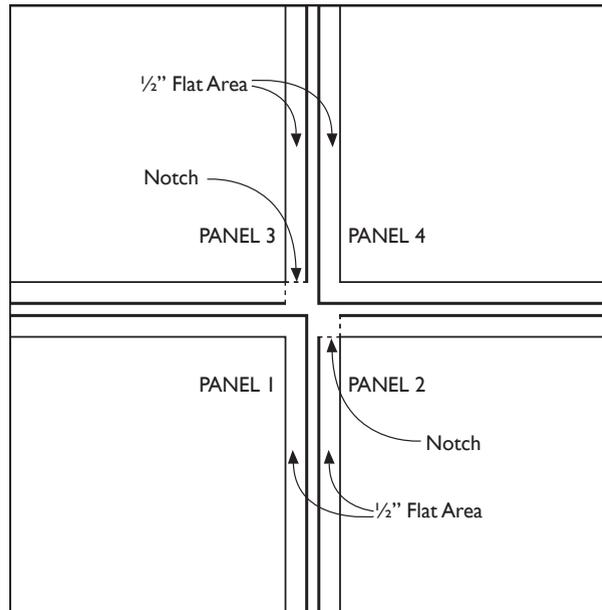

5. Carefully apply the adhesive to the ceiling (or wall for 2' x 2' wall applications) and lay up your first tile applying pressure as you hold it. (If installing a tile with protective masking, you can remove it at this step of the installation. Make sure the tile is straight before you continue with the next one.
6. Repeat this process, working left to right (and removing the protective masking after installing each panel, if applicable). When finished, use a paint roller on an extension pole to apply additional pressure to the ceiling. Filler strips can be installed around the perimeter of the room if desired.

*The method you choose for cleaning prior to application must be compatible with the surface you are cleaning (e.g. denatured alcohol, degreaser, soap & water, TSP, Greased Lighting, etc.). Check the manufacturer's label directions for instructions on using the product.

Lay-In Ceiling Tiles

1. Count how many tiles you will need for the installation. For panels that need to be trimmed, use the mineral tile as a template and using your marker and utility knife (razor, scissors, etc.) score the FlexLam™ tile to size and then snap the pieces apart.
2. Install the GridMax™ covers to the t-bar suspension grid to allow for a seamless look on your ceiling. Be sure to install the four foot **MAIN** covers first and then install the two foot or four foot **TEE** covers. The **MAIN** covers already come with sections notched out where the **TEE** grid crosses under it.
3. After all the covers are in place, begin to install all the panels into the suspension grid.
4. If making room for a ceiling lamp, be sure to cut out an opening on the tile where the lamp will be attached.

Backsplashes

1. Before starting the installation, surface must be dry, smooth and free from dust, grease, wax, and other particles*.
2. Measure the area to be covered horizontally to determine how many tiles and how many adhesive rolls you will need across (if using adhesive strips) and then measure the height of your backsplash to determine if any trimming is necessary.
3. Apply the desired method of adhesive, according to the manufacturer's instructions.
4. Starting at the left side of your backsplash, place tiles with some pressure to ensure a strong hold. (Be sure to remove protective masking if your tiles came with one). As you work from left to right you want to make sure that the flat edge is always on the right.
5. Make sure to apply a bit of your selected adhesive over the flat edge and the wall between tiles for extra hold.
6. Carefully apply your second tile making sure to line them up correctly and apply pressure to the tile for a strong bond.
7. Continue this process until you reach the last tile. Depending on the size of your backsplash, you may need to cut the last tile to fit. If so, measure the area and the tile and then use your straight edge and marker to mark the cut line. Using your scissors or utility knife, cut firmly on the decorative side of the tile and snap the pieces apart -- **NOTE:** If your tiles came with protective masking you must cut from the backside.

**The method you choose for cleaning prior to application must be compatible with the surface you are cleaning (e.g. denatured alcohol, degreaser, soap & water, TSP, Greased Lighting, etc.). Check the manufacturer's label directions for instructions on using the product.*

4' x 8' Wall Panels

1. Before starting the installation, surface must be dry, smooth and free from dust, grease, wax, and other particles*.
2. Measure the area to be covered to determine how many panels you will need.
3. FlexLam™ wall panels should be installed from left to right, making sure the small flats of the panel are to the top and right (if your panel has Built-In-Overlap or BIO). After applying your selected adhesive to the wall, according to the manufacturer's instructions, lay up your first tile applying pressure as you hold it (if your panel came with protective masking, gently remove it now). Make sure the panel is straight before you continue with the next one.
4. Repeat the process, working from left to right (removing the protective masking after installing each panel, if your tile came with masking). When finished, use the paint roller on an extension pole to apply additional pressure to the wall.

**The method you choose for cleaning prior to application must be compatible with the surface you are cleaning (e.g. denatured alcohol, degreaser, soap & water, TSP, Greased Lighting, etc.). Check the manufacturer's label directions for instructions on using the product.*

Outlet Covers

1. Some outlet covers (simple, inexpensive) can be covered with matching covers. To do this, peel the backing off of the outlet cover piece and lay it flat, placing the sticky side up. Place the outlet cover centered and face down on the adhesive sheet. Using a utility knife, cut a square away from each corner. Fold the edge of the adhesive sheet over the outlet cover to create a seamless finish. Turn the cover over, and use a utility knife to carefully cut away the outlet openings.

CONDITIONS & WARRANTY

Architectural Products by Outwater, L.L.C. believes all information contained herein to be correct. It is the responsibility of the fabricator/customer to completely test the adhesives and methods of fabrication to ensure that the results are satisfactory. Architectural Products by Outwater is not responsible for any fabrication or ancillary costs involved with using FlexLam™ products.

All shipments are to be inspected within 10 working days after delivery. We are to be informed in writing of any potential adjustment necessary. The seller's only obligation will be to replace defective sheets on a one to one basis. Neither the manufacturer nor the seller shall be liable for any additional damage or loss, directly or indirectly, arising as a result of using FlexLam™ products.

Slight imperfections and color variations from sheet to sheet are possible and considered normal. Please inspect each sheet carefully before fabrication to ensure it meets your need.

Visit us online at outwater.com for the latest patterns and finishes.